

DUAL CONTROL LEVER (ROAD): Removal & Installation



1. Release axle set screw.



2. Insert Allen key into either end of the axle.



3. Then push to remove the axle.



4. Remove flight deck sensor bracket or place holder if sensor is not installed.



5. To remove the main assembly, move flight deck contacts towards the front passway.





6. Make sure the lever spring is properly engaged with the main lever assembly.



7. Push the flight deck contacts through the front passway.



8. Push the main lever assembly and pin together. Make sure the return spring properly engages the pin.



9. Install lever axle by inserting an Allen at either end. The relieved portion of the axle should line up with axle set screw.



10. Install and tighten lever axle set screw.



11. Make sure the flight deck contacts are properly positioned for the sensor plates / space holder.